

CIRCLE

1. Select CIRCLE option.
2. Point pen at point on screen where you wish centre of CIRCLE to appear on the screen.
3. Press CONTROL key. Screen will flash and point will appear on the screen.
4. You may now 'PIN POINT' the 1st cursor by use of the CURSOR keys.

Repeat Nos.2, 3 & 4 to position circumference of the CIRCLE.

To quit this option press SPACE BAR.

FILL

1. Select FILL option.
2. Select FILL pattern from FILL menu which is now on the screen.
3. Use pen to place cursor within the enclosed area which you wish to FILL.
4. You may now 'PIN POINT' cursor by use of the CURSOR keys.
5. Press CONTROL key to FILL selected area.
6. Area selected will first be filled in current pen colour. Border colours will flash while micro computes area to be FILLED. The area will then revert to the pattern or colour selected.
7. To quit this option while FILLING is in operation you must depress and hold down the SPACE BAR until option aborts.

To quit this option press SPACE BAR.

N.B. Area to be filled must be completely enclosed by a solid line to prevent pattern or colour from 'leaking' to surrounding areas. BRUSH option is not 'leak proof'.

It is not possible to FILL over a pen colour using the same pen as that used to draw that colour originally. This also applies to BACKGROUND colour.

TEXT

1. Select TEXT option.
 2. Select TEXT size required from the TEXT menu which now appears on the screen.
 3. Use CURSOR keys to move box to required starting point.
 4. Type required TEXT on keyboard.
- To quit this option press RETURN key.