

N.B. If you wish to change the colour of anything drawn on screen you may do so by using the COPY option with the required pen colour.

WASH

Example of use:—

1. Draw a line using Pen 1 in GREEN.
 2. Draw a line using Pen 2 in GREEN.
- Draw these lines so that they intersect each other.
3. Change colour of Pen 2 to PINK.
 4. Select WASH option on MAIN Menu.
 5. Select WASH PEN on WASH Menu which will now appear on screen.
 6. Watch as results appear on screen.

N.B. To WASH a PEN in BACKGROUND colour, i.e. ERASE the current PEN — select ERASE PEN on WASH Menu. No matter how many colours have been used with current PEN they will be changed to current PEN colour when WASH option is used — leaving other PENS untouched.

SAVE

1. Select SAVE option.
2. Select TAPE, DISK or RETURN from SAVE Menu.
3. A file name must be entered at this point. Up to 8 characters may be used.
4. Follow instructions on screen. For full details of Disk use see the Commodore Disk Users Manual.

LOAD

1. Select LOAD option.
2. Select option on LOAD Menu.
3. Enter file name.
4. Follow instructions on screen.

PRINT

1. Select PRINT option.
- To print to Commodore 801-803-1000 printers, follow instructions on screen.

NEW

1. Select NEW option.
2. Select YES on screen to clear current screen.