

2. Type LOAD "C16 PRINTER" & RETURN.
 3. When printer routine has been loaded TYPE RUN and screen will be printed.
 4. To quit this option hold down SPACE BAR.
 5. To return to MAIN program rewind tape and load.
- N.B.** No graphics details will be lost but the BACKGROUND and PEN colours will be changed.

SAVING & LOADING TO & FROM TAPE & DISK

1. Select EXIT option on MAIN Menu.
 2. Type MONITOR & press RETURN.
 3. To SAVE a screen to Tape type:—
S "NAME",1,1800,4001
 4. To SAVE a screen to Disk type:—
S "NAME",8,1800,4001
 5. To LOAD a screen from Tape type:—
L "NAME",1
 6. To LOAD a screen from Disk type:—
L "NAME",8
- To return to Main Menu type X and press RETURN
type RUN.