any of the following options which you may select:— BOX, CIRCLE, LINE, BANDING, RAYS, TRIANGLE and DRAW.

- 1. **THIN** This option produces a uniformly thin line.
- 2. **QUILL 1, 2 & 3** These options produce a line which is thicker in the 'X' direction than in the 'Y' direction thus giving a 'Copperplate' effect. Quill 1, 2 & 3 are graded to give a progressively thicker line.
- 3. **THICK** This option will draw a uniformly thick line.
- 4. **XDOT** This option produces a dotted line in the 'X' direction and can be used to draw vertical lines in the DRAW option.
- 5. **YDOT** This option produces a dotted line in the 'Y' direction and can be used to produce horizontal lines in the DRAW option.
- 6. **DOTLI** This option produces a dotted line in the DRAW option or in any of the GEOMETRIC options.

GEOMETRIC OPTIONS

The GEOMETRIC options can be drawn in any of the LINE TYPES so be sure to select the line which you require before choosing a GEOMETRIC option.

N.B. You may abort from any GEOMETRIC option by pressing E key which will erase that option only.

BOX

- 1. Select BOX option.
- 2. Point pen to the point on the screen where you wish one corner of the BOX to appear.
- 3. Press CONTROL key. Screen will flash and a point will appear on the screen.
- 4. You may now 'PIN POINT' the 1st cursor by use of the CURSOR keys.
- 5. Point pen to the point on the screen where you wish to position the opposite corner of the BOX.
- 6. Press CONTROL key. Screen will flash and a BOX will appear.
- 7. You may now move the 2nd cursor by use of the CURSOR keys.

You may now repeat this option as often as required. To quit this option press SPACE BAR.

BANDING

1. Select BAND option.