

ERASE

1. Select ERASE option.

This option ERASES last option drawn on the screen.

BORDER

1. Select BORD.

This option changes the BORDER colour to the current pen colour.

BRIGHTNESS

Point pen at cursor to the right of BRI option. The number on the side of BRI will change from 0 to 7. The higher the number selected the more brilliance will be given.

PEN 1, 2, 3

EXAMPLE:—

1. Select Pen 1.
2. Select colour Blue.
3. Select Pen 2.
4. Select colour Green.
5. Select Pen 3.
6. Select colour Red.
7. Draw line on screen using DRAW option.
8. Select Pen 2.
9. Draw line on screen using DRAW option.
10. Select Pen 3.
11. Draw line on screen using DRAW option so that all three lines intersect at several points.

Note that where the lines cross the colours do not merge as would have happened if only one Pen had been used.

BACKGROUND

1. Select BACK.
2. Select colour.

The BACKGROUND colour can be used to draw shapes on top of other Pen colours or to erase.

COLOUR OPTIONS

The two columns on the right hand side of the menu allow you to select any of the 16 colours for the various options.

